



DIY SELF-SERVICE GUIDE

HOW TO ADJUST A SLIDING SCREEN DOOR



Materials Required:

Phillips Head Screwdriver



Difficulty:

Easy



Time Requirement:

5 minutes


INSTRUCTIONS:

1. Start on the inside of the house. Locate the adjustment screws that are on the top and bottom of the screen door.



INSIDE VIEW

LOCATE TOP SCREW

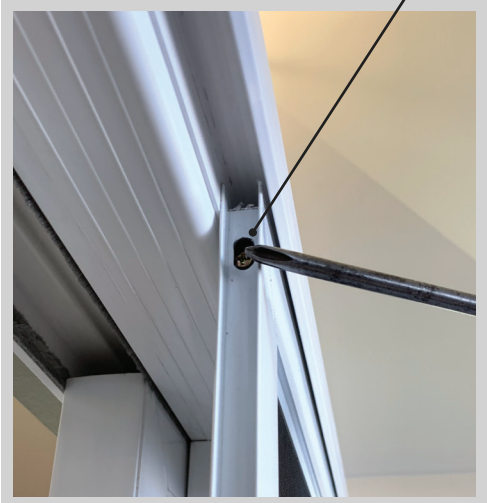

LOCATE BOTTOM SCREW

2. Start at the bottom, using Phillips head screwdriver, turn the screw counter-clockwise to raise the screen door up. Repeat on the top.



TURN COUNTER-CLOCKWISE

3. Go to the outside of the house and repeat, start at the bottom and finish on the top.

4. You want the reveal to be equal. This is the space between the screen and the edge of the door frame.

5. Test the screen door for smooth operation.



REVEAL